


FUTURA RAPIDFIT DUMMY SET

Print: Actual size on A4 paper


Product Code: 10013.D | 10023.D | 10073.D
10083.D | 10093.D | 7015.D | 7019.D | 7106.D | 7313.D | 10003.D | 10053.D

Zanda 1152.-8mm dummy fix mounts are designed to be recessed and screwed onto the door face, with the handle slipping over the top. The handle base plate is then screwed to, or bolted through the door.



Note: It is important to ensure solid fixing is available for handle dummy mount screws (specially for hollow doors).

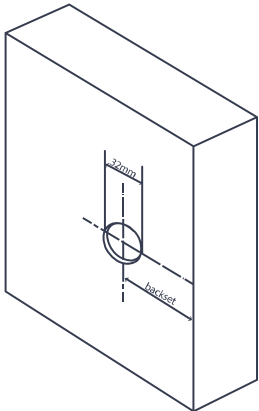

- 1 Establish the height and position for the handle on the door.
- 2 Drill a 32mm diameter recess on the face of the door to a depth of 4mm. Match the backset measurement of the passage doors throughout your home

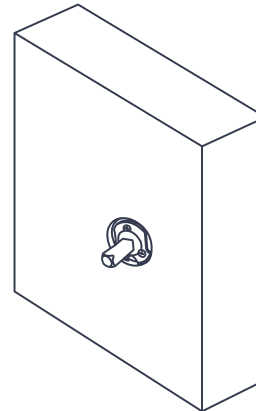


- 3 Fill the dummy spindle by drilling and fitting the three wood screws provided. Ensure the grooved side of the spindle is aligned with the grub screws on the handle.

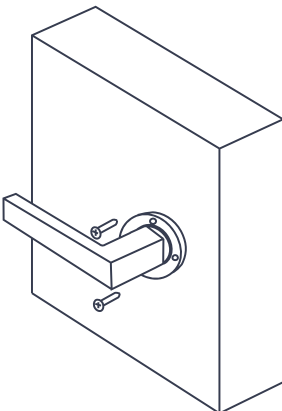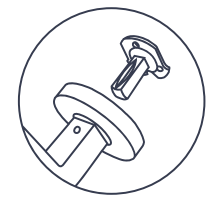


- 4 Slide the handle onto the spindle ensuring that it sits straight on the door face.
- 5 Install the handle by screwing the base plate to the door with the wood screws provided.

Note: In some cases where through the door bolts are provided, the door can be drilled on both sides to accept the through screws.

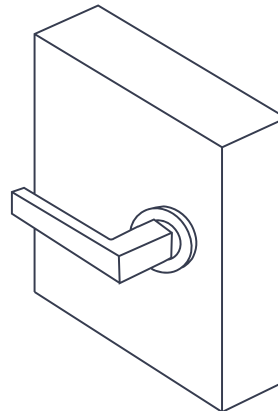

- 6 Screw the rose cover onto the handle and tighten the grub-screw on the side of the lever onto the spindle.

Note: The grub screws may need a re-tighten after a bedding in period. We recommend medium strength threadlock to be used.

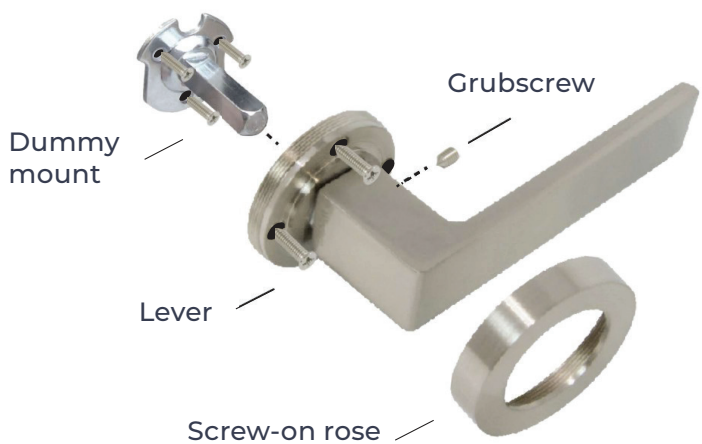

Note: If the 1152 - dummy fix mount is not fitted, then there is no warranty on the Futura levers.